

# Chrysler Crossfire Stainless Steel Sports Upper Grille

**Kit Contents: -**

1. off Upper Grille



**Upper Mesh Grille Fitting Instructions**

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Remove existing grille.
3. Offer the grille to the aperture and guide the lower bracket through the hole in the existing aperture making sure the clip has hooked behind the aperture (fig 1 & 2).
4. Making sure the grille is level then fix the 3 upper brackets using the existing bolts to the car as shown in fig 3 & 4.
5. Remove the tape and the grilles are now complete.

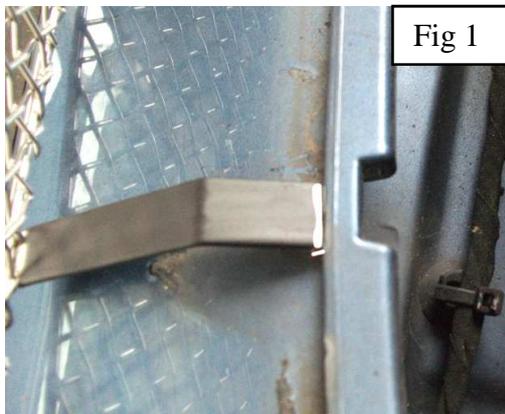


Fig 1



Fig 2



Fig 3



Fig 4