

Chrysler Crossfire Stainless Steel Sports Lower Grille Set

Kit Contents: -

- 1. off LH Lower Grille
- 1. off RH Lower Grille
- 2. off M3 Toggle Clamp
- 2. off M3 x 40mm Pan Head
- 2. off No6 x ¾ Screws



LH & RH Lower Mesh Grille Fitting Instructions

1. Fit masking tape around the apertures to protect the paintwork while fitting (fig 1).
2. Fit the two toggle clamps through the grille (fig 1).
3. Offer the grille to the aperture and locate the toggle clamps through the holes in the existing aperture.
4. Keep pressure on grille and tighten the screws into the toggle clamps making sure the grille stays central in the aperture. (use a screw driver through the mesh to hold the toggle clamps in place (fig 2).
5. Once the grille is tightly in place and central, screw the two No6 x ¾ screws through the locating diamonds on the grille (fig 3).
6. Repeat steps to the opposite side grille.
7. Remove the tape and the grilles are now complete.



Fig 1



Fig 2

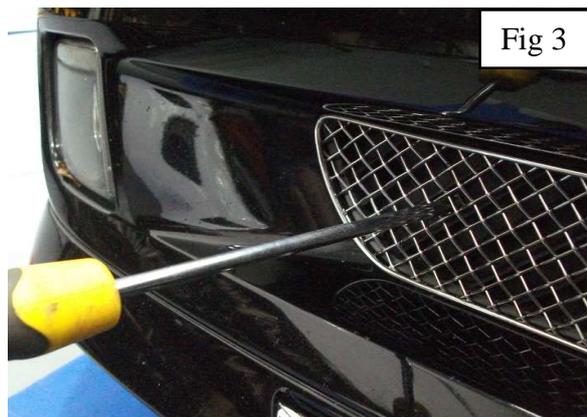


Fig 3

THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.